

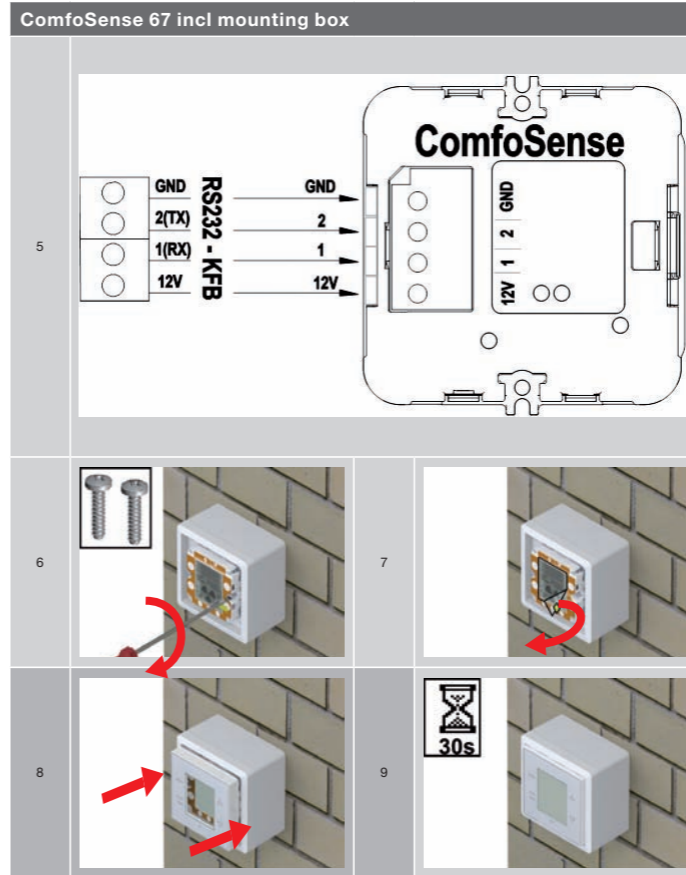
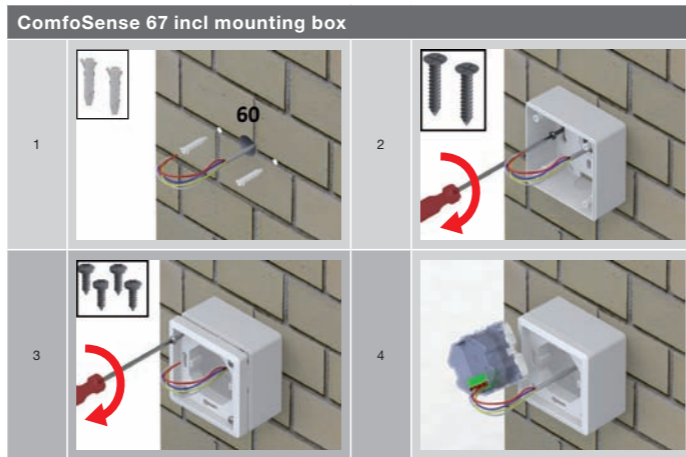


ZGNL-QuickGuide_D20131002_V1013_NL_EN_DE_FR_IT_PL_ES_Subject to change

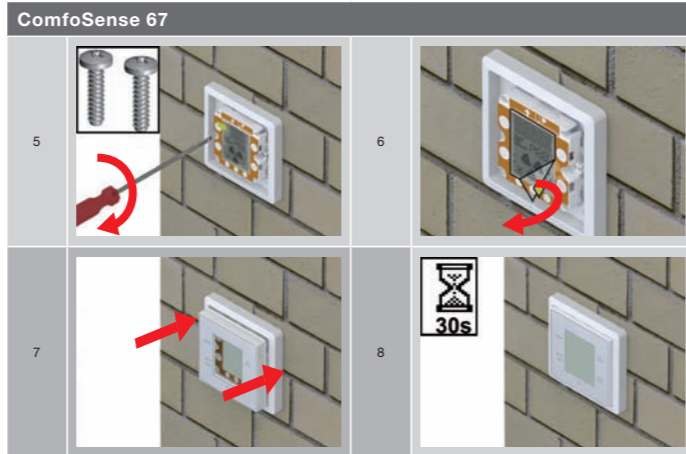

Snelstart installatie ComfoSense
Quick Guide Installation ComfoSense
Kurzanleitung Installation ComfoSense
Guide d'Installation Rapide ComfoSense
Guida di installazione Rapide ComfoSense
Prezvodnik szybkiej instalacji ComfoSense
Guía de instalación rápida ComfoSense

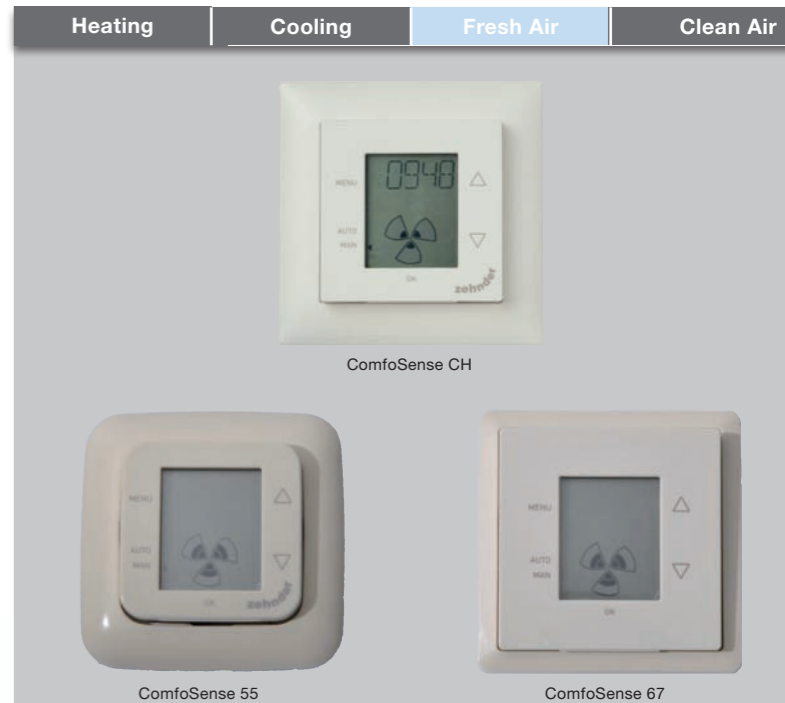

always around you **zehnder**®

ComfoSense CH

1 2 3 4

5

ComfoSense

RS232 - KFB

GND 2(TX) 1(RX) 12V

AV1

GND 2 1 12V

ComfoSense CH

6 7 8 9

30s

ComfoSense 55

1 2 3

4

ComfoSense

RS232 - KFB

GND 2(TX) 1(RX) 12V

AV1

GND 2 1 12V

ComfoSense 55

5 6 7 8

30s