

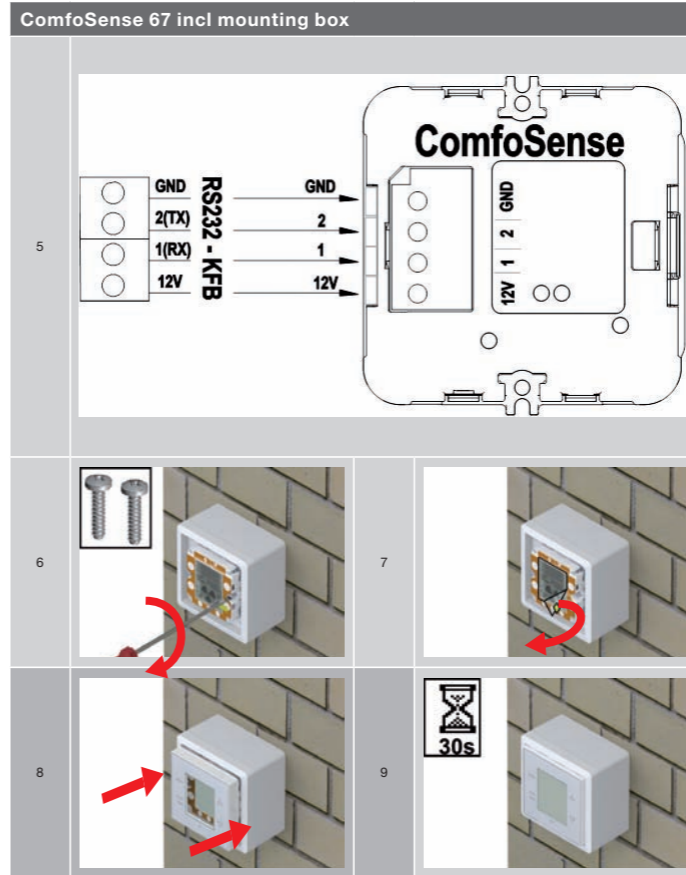


ZGNL-QuickGuide\_D20131002\_V1013\_NL\_EN\_DE\_FR\_IT\_PL\_ES\_Subject to change

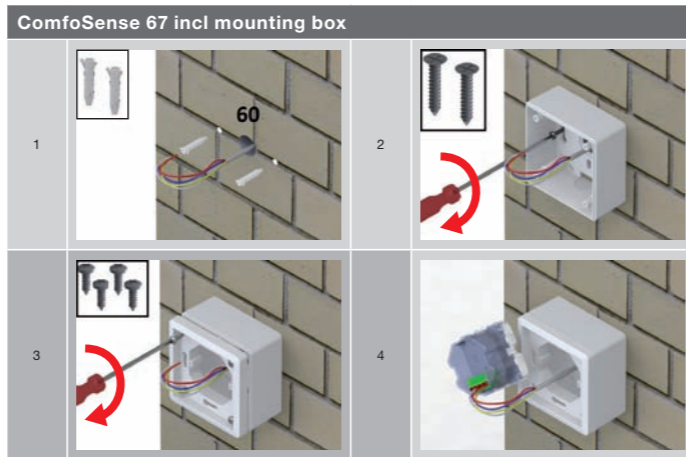

**Snelstart installatie ComfoSense**  
**Quick Guide Installation ComfoSense**  
**Kurzanleitung Installation ComfoSense**  
**Guide d'Installation Rapide ComfoSense**  
**Guida di installazione Rapide ComfoSense**  
**Prezvodnik szybkiej instalacji ComfoSense**  
**Guía de instalación rápida ComfoSense**

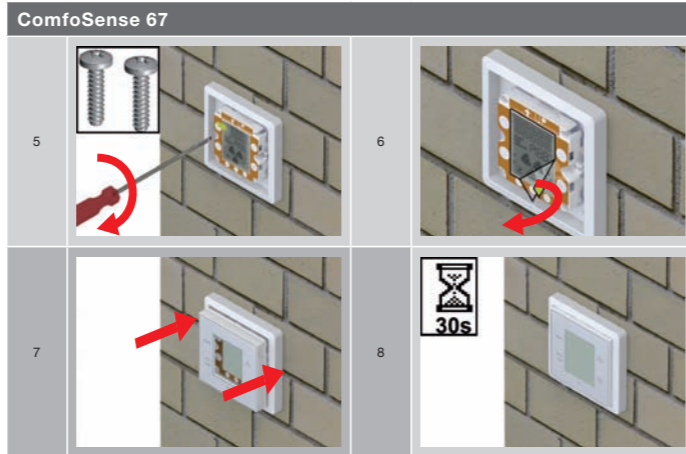

always around you **zehnder**®

**ComfoSense CH**

1 2 3 4

5

**ComfoSense**

RS232 - KFB: GND, 2(TX), 1(RX), 12V

AV1: GND, 2, 1, 12V

**ComfoSense CH**

6 7 8 9

30s

**ComfoSense 55**

1 2 3

4

**ComfoSense**

RS232 - KFB: GND, 2(TX), 1(RX), 12V

AV1: GND, 2, 1, 12V

**ComfoSense 55**

5 6 7 8

30s