



ComfoWell CW 520 and CA 350

Installation sequence

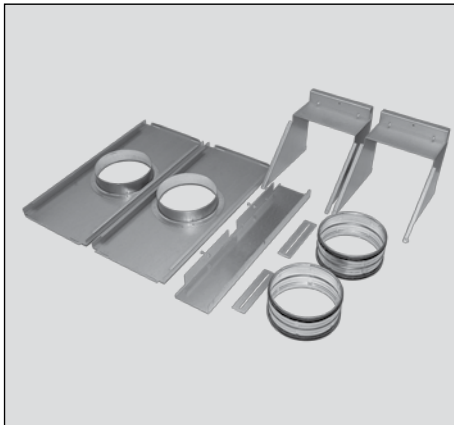

1. Installation set
CW-K 520-CA 350

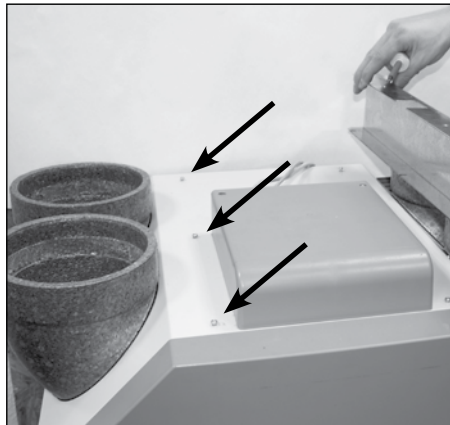


2. Unscrew screws approx.
3 mm out of the CA 350



3. Locate U-profile and screw
onto the CA 350



4. Attach the mounting to the
U-profile

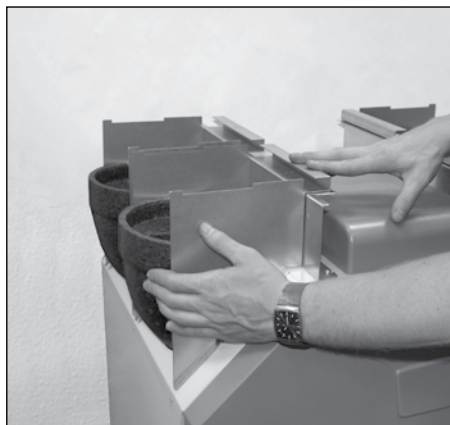


5. OK



6. Insert the 160 mm nipple
into the CA 350



9. Mount end piece plate

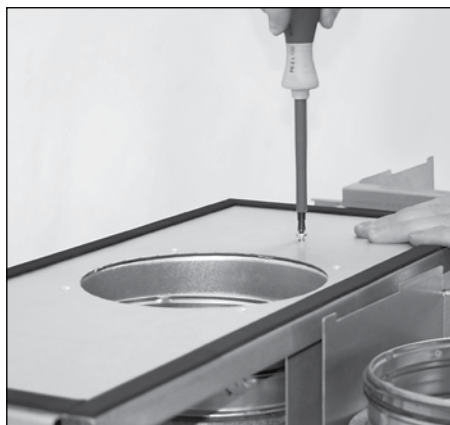

10. Secure end piece plate with
one screw



11. OK