



ComfoWell CW 320 and CA 350

Installation sequence

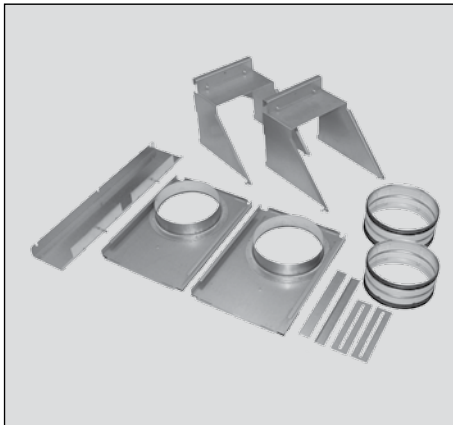

1. CW-K 320 installation set
CA 350

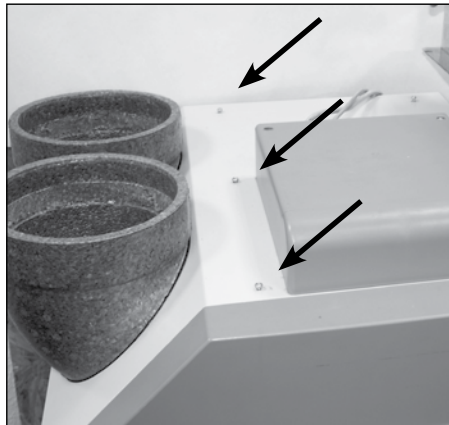


2. Unscrew screws approx.
3 mm out of the CA 350



3. Locate U-profile and screw
onto the CA 350



4. Attach the mountings to the
U-profile

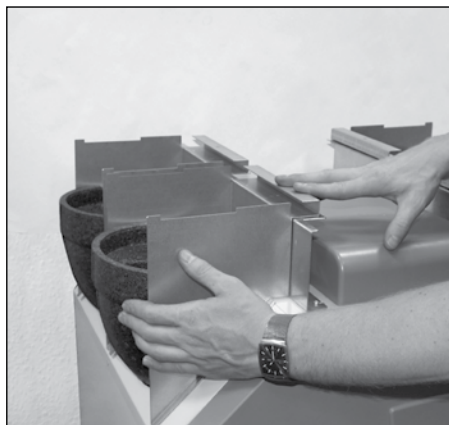

5. OK



6. Insert the 160 mm nipple into
the CA 350



7. Mount end piece plate



8. Secure two end piece plates
with one screw each



9. Place ComfoWell on the end
plate